





EtherNet/IP connection

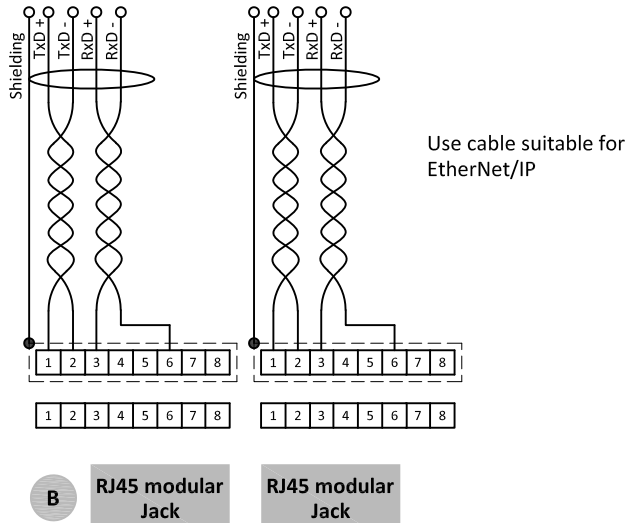

RS232 connection

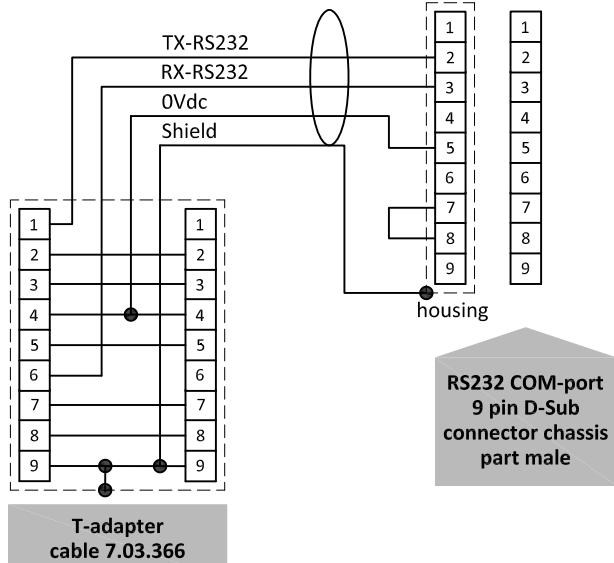


Model key explanation

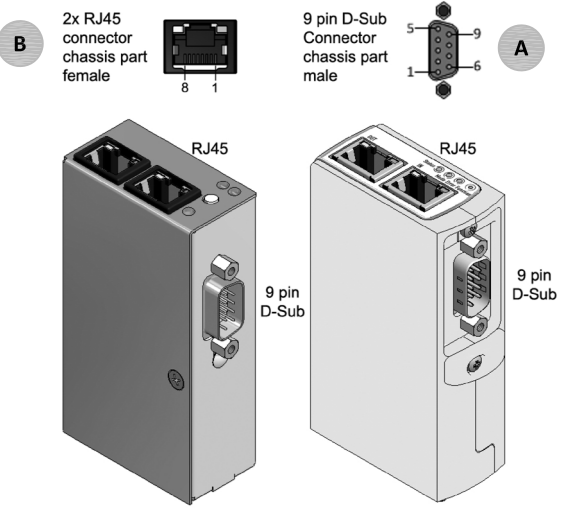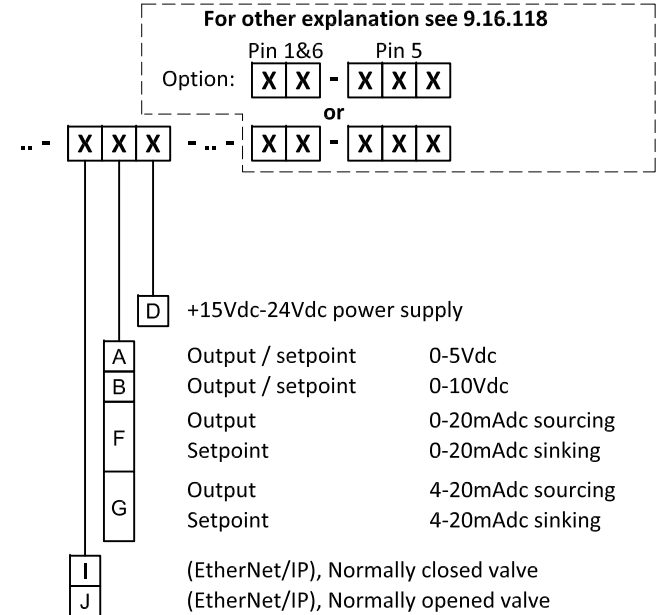

A: Instrument I/O

1	TX-RS232/BUS
2	Analog output
3	Analog input
4	0V power
5	Custom 1
6	RX-RS232/BUS
7	+Us
8	0V sense
9	Shield

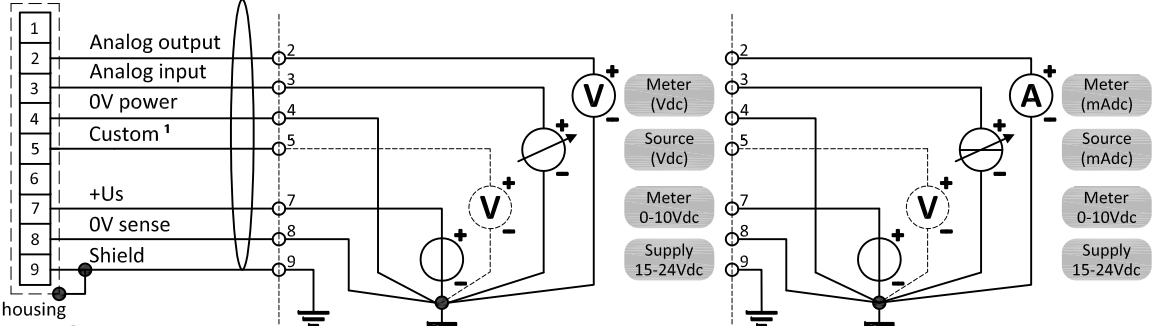

9 pin D-Sub connector chassis part male

9 pin D-Sub connector cable part female

Analog operated 0-5 or 0-10Vdc

Analog operated 0-20 or 4-20mAcd

Note: 1) Default disabled, 0Vdc.

Note: When using a field bus or RS232, it is not possible to operate the instrument by using the setpoint signal of the analog D-sub connector without changing the value of parameter "control mode". See doc.nr. 9.17.023 for more details. Do not connect an external valve to instruments, set as MFM or EPM.