

METAL SEALED

Digital Mass Flow / Pressure Meters and Controllers



Introduction

Bronkhorst High-Tech B.V., European market leader in thermal Mass Flow Meters/Controllers and Electronic Pressure Controllers, has many years of experience in designing and manufacturing precise and reliable measurement and control devices. With a wide range of instruments, Bronkhorst offers innovative solutions for many different applications in many different markets. The instruments are made to customers' specification, in various styles, suitable for use in laboratory, industrial environment, hazardous areas, semiconductor or analytical installations.

Metal sealed

Since 1989 Bronkhorst manufactures metal sealed Mass Flow and Pressure Meters/Controllers, designed especially to meet the requirements of the semicon market as well as other high purity gas applications.

The instruments feature high surface quality and are of modular construction with metal-to-metal seals that ensure long-term leak tightness. Metal sealed Mass Flow Meters/Controllers can be supplied in ranges starting from 0,12...6 sccm up to 1...50 slm (based on N2) or even higher on request. Metal sealed Pressure Meters/Controllers are available in pressure ranges from 0,029...1,43 psi up to 18...900 psi.

> State of the art digital design

Todays instruments are equipped with a digital pc-board, offering high accuracy, excellent temperature stability and fast response (settling time t98 down to 600 msec). The main digital pc-board contains all of the general functions needed for measurement and control. The latest EL-FLOW® design features Multi Gas / Multi Range functionality, providing (OEM-) customers with optimal flexibility and process efficiency. For the convenience of the customer Bronkhorst provides easy-to-use configuration and monitoring software tools.


In addition to the standard RS232 output the instruments also offer analog I/O. Furthermore, an optionally integrated interface board provides DeviceNet™, CANopen®, PROFIBUS DP, Modbus RTU/ASCII/TCP, FLOW-BUS, EtherCAT®, PROFINET, EtherNet/IP or POWERLINK protocols.

General features

- patented metal-to-metal seal construction ensures long-term leak tightness (to atmosphere)
- high surface quality of wetted parts
- fast response, excellent repeatability
- ◆ flow ranges from 0,12...6 sccm up to 1...50 slm
 N₂-equivalent (higher on request)
- Multi Gas / Multi Range functionality
- optional solutions for low pressure drop or vacuum applications
- pressure ranges from 0,029...1,43 up to 18...900 psi
- compliant with RoHS directives

Digital features

- Fieldbus interfaces:
 - CAN 2.0: DeviceNet[™], CANopen[®]
 - Serial RS232/485: PROFIBUS DP, Modbus RTU/ASCII, FLOW-BUS
 - Industrial Ethernet protocols: EtherCAT®, PROFINET, Modbus/TCP, EtherNet/IP, POWERLINK
- ◆ rotary switches for selecting node address and the DeviceNet™ data rate
- high accuracy, \pm 0,5% RD + \pm 0,1% FS
- storage of max. 8 calibration curves
- alarm and counter functions
- ◆ single rail power supply: +15 or +24 Vdc

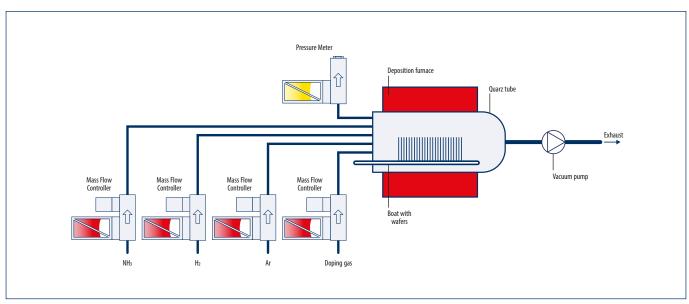

> Technical specifications

MASS FLOW measurement / control system

Accuracy (incl. linearity) (based on actual calibration)	± 0,5% Rd plus ± 0,1% FS		
Turndown	up to 1:150 (up to 1:150 (1:50 in analog mode)	
Repeatability	< 0,2% Rd		
Settling time (controller)	1 second typical above 5% FS; option: down to 600 msec		
Control stability	$<\pm0,05\%$ FS (typical for 1 slm N ₂)		
Max. operating pressure	meter: controller:	1500 psig; 1000 psig	
Temperature sensitivity	zero: span:	< ± 0,05% FS/°C; < ± 0,05% Rd/°C	
Pressure sensitivity	0,1% Rd/bar typical N ₂ , 0,01% Rd/bar typical H ₂		
Warm-up time	30 min. for optimum accuracy 2 min for accuracy ± 2% FS		


PRESSURE measurement / control system

Accuracy (incl. linearity) (based on actual calibration)	± 0,5% of full scale (FS)
Pressure rangeability	Measurement: 1 : 50 (2100%) Control (with flow range 1 : 50) P-602CM 1 : 20, P-702CM 1 : 5
Repeatability	≤ 0,1% RD
Response time sensor	< 2 msec
Control stability	$\leq \pm 0.05\%$ FS (typical for 1 slm N ₂ at specified process volume)
Temperature sensitivity	< ± 0,1% FS/°C

General performance

Operating temperature	-10+50°C; up to $+70$ °C on request
Leak integrity (outboard)	$< 2 \times 10^{-11} \text{ Pa.m}^3/\text{s He}$
Leak-by through closed valve	< 10 ⁻⁵ Pa.m³/s He
Attitude sensitivity	may be mounted in any position

> Dimensions and weights

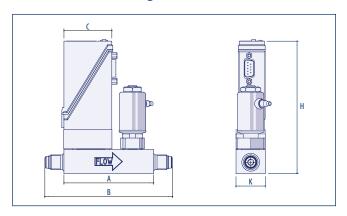

Mass Flow and Pressure Meters / Controllers – 1/4" VCR

Model	Α	В	C	Н	K	Weight
F-111CM MFM	87	124	47	129	29	0,6
P-502CM EPT	87	124	47	129	29	0,6
F-201CM MFC	87	124	47	129	29	0,7
P-602CM EPC	87	124	47	129	29	0,7
P-702CM EPC	87	124	47	129	29	0,7

Dimensions in mm, weight in kg.

Mechanical parts

Material (wetted parts)	stainless steel 316L or comparable
Process connections	1/4" face seal male
Outer seals	metal-to-metal (no rings)
Valve seat (controllers)	Kalrez® (FFKM); option: Viton®
Ingress protection (housing)	IP40

Electrical properties

+1524 Vdc			
Supply		at voltage I/O	at current I/O
15 V		95 mA	125 mA
24 V		65 mA	85 mA
15 V		290 mA	320 mA
24 V		200 mA	215 mA
15 V: < 75 mA 24 V: < 50 mA			
05 (10) Vdc or 0 (4)20 mA (sourcing output)			
standard RS232 options Profibus DP, DeviceNet™, EtherCAT® Modbus-RTU/ASCII, PROFINET, FLOW-B EtherNet/IP, Modbus-TCP, POWERLINK		FINET, FLOW-BUS,	
	Supply 15 V 24 V 15 V: < 75 mA 24 V: < 50 mA 05 (10) Vdc (sourcing out standard	Supply 15 V 24 V 15 V: <75 mA 24 V: <50 mA 05 (10) Vdc or 0 (sourcing output) standard RS23 options Profi	Supply at voltage I/O 15 V 95 mA 24 V 65 mA 15 V 290 mA 24 V 200 mA 15 V: < 75 mA

Electrical connection

Analog/RS232	9-pin D-connector (male);	
PROFIBUS DP	bus: 9-pin D-connector (female); power: 9-pin D-connector (male);	
DeviceNet™	5-pin M12-connector (male);	
Industrial Ethernet	2x RJ45 modular jack (in/out)	
Modbus/FLOW-BUS	RJ45 modular jack	

Notes

- Mass flow units sccm and slm refer to 0° C (32°F) and 1013 mbar (14,7 psi)
- Technical specifications subject to change without notice.

Models and ranges

Mass Flow Meters (MFM); ranges based on $N_{\rm 2}$

Model	min. flow	max. flow
F-111CM	0,15 sccm	150 slm

Mass Flow Controllers (MFC)

Model	min. flow	max. flow
F-201CM ¹⁾	0,126 sccm	150 slm

Electronic Pressure Transducers (EPT)

Model	min. pressure	max. pressure
P-502CM	0,0291,43 psi ²⁾	18900 psi ²⁾

Electronic Pressure Controllers (EPC)

Models	min. pressure	max. pressure
P-602CM ¹⁾ (forward pressure control)	0,0721,43 psi ²⁾	45900 psi ²⁾
P-702CM ¹⁾ (back pressure control)	0,291,43 psi ²⁾	180900 psi ²⁾

¹⁾ Kv-max = 6,6 x 10⁻²

²⁾ Absolute or relative (gauge)

> Fields of application


Both Mass Flow Meters / Controllers and Pressure Meters / Controllers are applied across a huge range of applications e.g. in the fabrication of gas compositions, for CVD and PVD, optical glass coatings, LED production, in vacuum technology and solar power (Photo-Voltaic) element manufacturing and also in semiconductor processes such as ion implantation, etching processes and atomic layer deposition (ALD). Depending on the chemical properties of the process gases and the level of particle cleanliness required, equipment builders often prefer to apply metal sealed equipment over those with elastomeric seals. Bronkhorst has many years of experience, supplying precise and reliable instruments for demanding high-purity applications, distinguishing themselves by unique metal-to-metal seals with excellent resealing capability.

> Enhanced performance


Close links with customers and long-standing business partnerships have resulted in a number of new requirements becoming evident, which are now met with the very latest technology from Bronkhorst*.

The main benefits are:

- Faster, more stable and with vastly improved specification
- User friendly and more forgiving of day-to-day disturbances
- Configurable for specific uses with wider ranging solutions

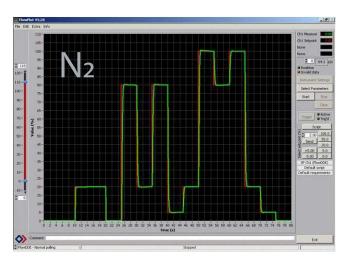

P in = 30 psig; P out = atm

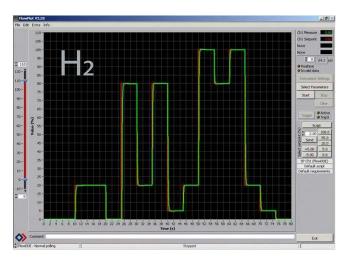


P in = 30 psig; P out = atm




EL-FLOW® model F-201CM Metal Sealed Mass Flow Controller

To illustrate the impressive performance of the latest EL-FLOW Metal Sealed series, please refer to the four graphs on this page. These examples show the performance of a Mass Flow Controller, when changing fluid from N_2 to H_2 at both 30 psig and 100 psig input pressure, without changing any of the control parameter settings.

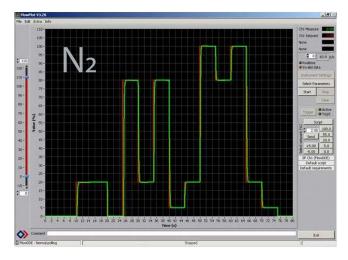


P in = 100 psig; P out = atm

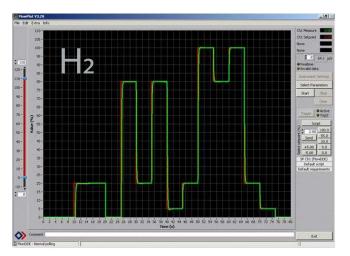

P in = 100 psig; P out = atm


Model number identification

PRESSURE Meters/Controllers

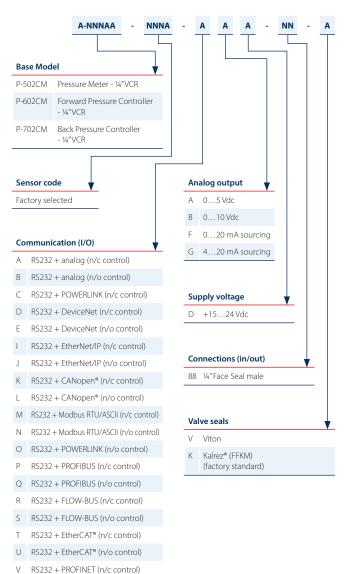

Model number identification

MASS FLOW Meters/Controllers

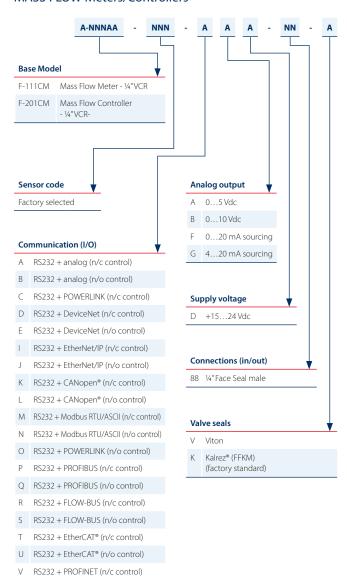



W

RS232 + PROFINET (n/o control)

RS232 + Modbus-TCP (n/c control)

RS232 + Modbus-TCP (n/o control)

EL-PRESS model P-702CM - Metal Sealed Pressure Controller



W

RS232 + PROFINET (n/o control)

RS232 + Modbus-TCP (n/c control)

RS232 + Modbus-TCP (n/o control)

EL-FLOW® model F-201CM - Metal Sealed Mass Flow Controller



Bronkhorst High-Tech designs and manufactures innovative instruments and subsystems for low-flow measurement and control for use in laboratories, machinery and industry. Driven by a strong sense of sustainability and with many years of experience, we offer an extensive range of (mass) flow meters and controllers for gases and liquids, based on thermal, Coriolis and ultrasonic measuring principles. Our global sales and service network provides local support in more than 40 countries. Discover Bronkhorst®!

